


BWD-012409 (0012) 电阻温度计使用说明书

安装方式

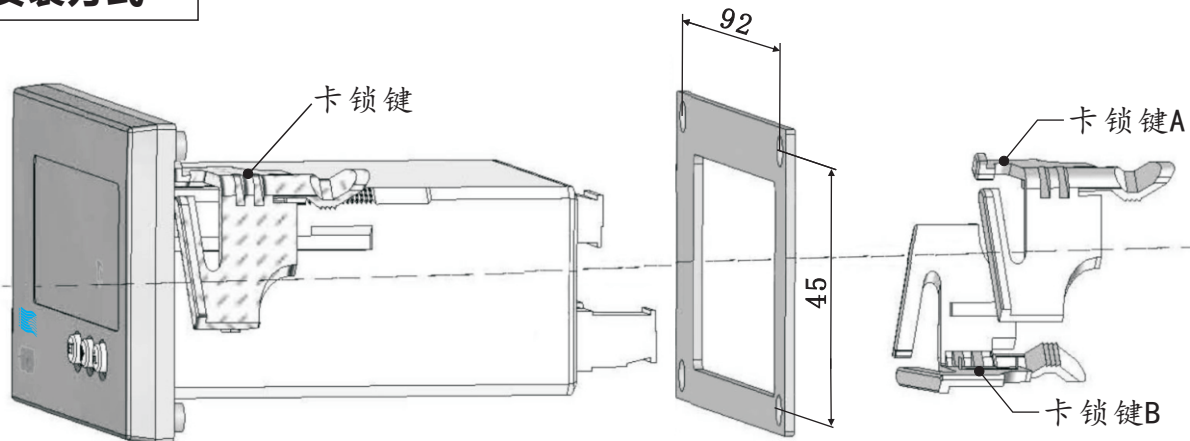

安装尺寸为92×45(另可选择152×76)

技术参数

测量范围：0℃~120℃	输入Pt100信号
宽电源：AC 85V~265V或DC110V~360V	输出4mA~20mA信号和RS485信号
准确度等级：0.5级	4mA~20mA输出负载≤500Ω
工作环境温度：-25℃~65℃	可进行多点调零以修正系统误差
相对湿度：≤90%（无凝露）	防护等级：IP40

调试方法

1.测量范围调整和多点调零(其他量程的电阻温度计可参照调试)

步骤	1	2	3※	4	(修正操作)		5	6	7	8	9
操作	长按 										
显示	Code	0000	2014	1-20	0.0	修正数值 (3~3循环)	120	160	1100	1140	(返回)

※：第3步通过   交替使用设置显示2014(代表-20℃~140℃量程); 0016(代表0℃~160℃量程);
0℃~160℃量程可进行10 140 180 1120 1160 五个点的修正。

2.最大值

- 2.1 长按  键3秒后显示温度计最大值;
2.2 长按  键3秒后清除温度计最大值(此功能应先显示最大值条件下生效)

3.通讯接口设置

步骤	1	2			3
操作	长按 				
显示	Code	485 1	485 2	485 C	(返回)


4. 通讯地址设置

步骤	1	2	3
操作	单按 		
显示	= 1	地址设置 (1~15)	(返回)

485 1表示科宏检测用,485 2表示Modbus通讯协议,485 C表示关闭通讯协议。

BWD-012409 (0012) 电阻温度计使用说明书

外形尺寸

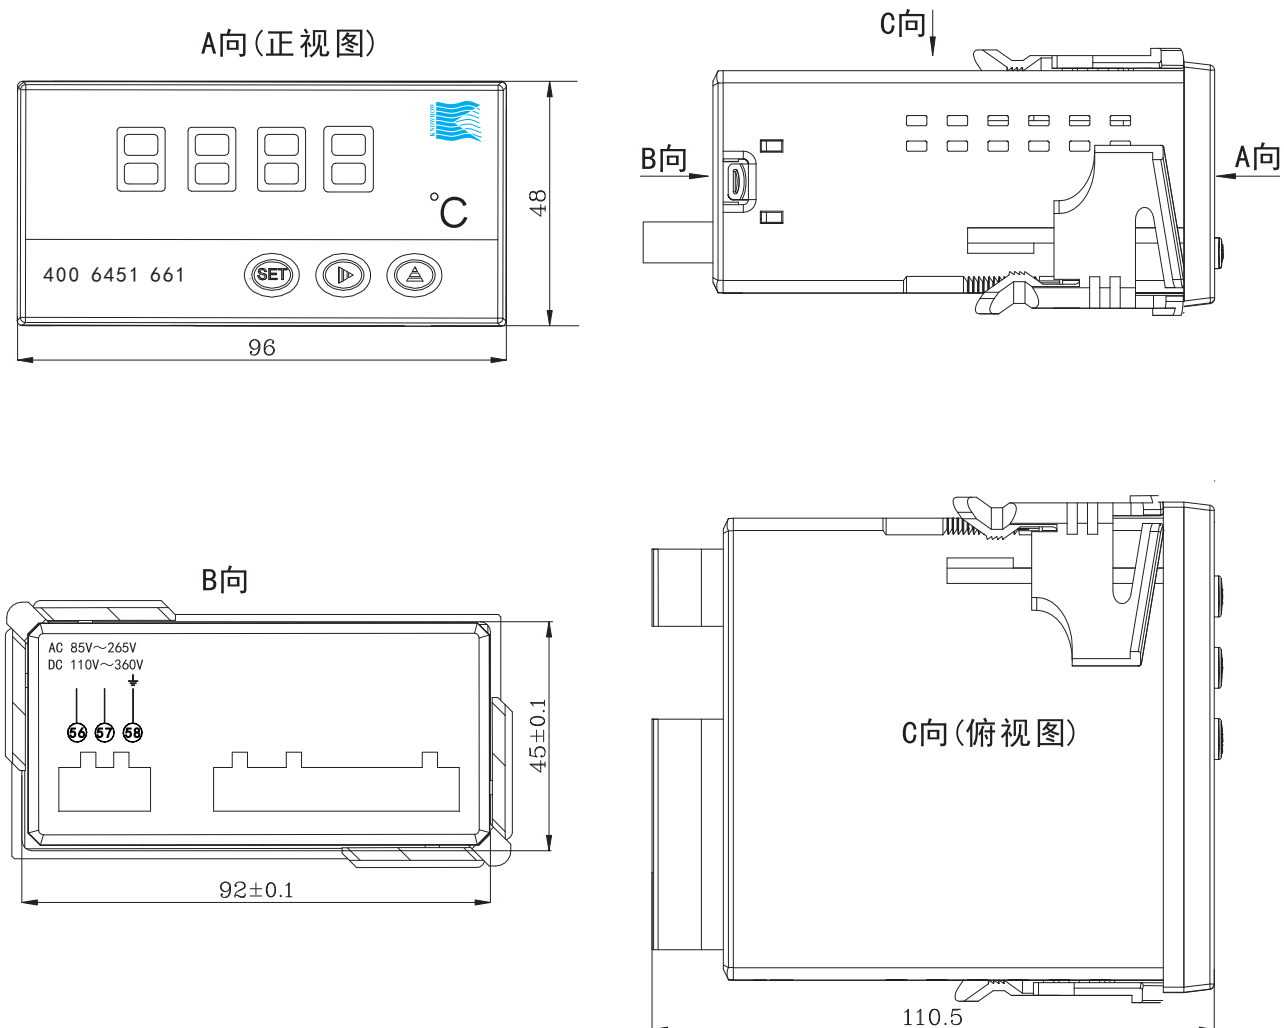

接线说明

